

Exchanging a short-circuit indicator

Type MD4

1. Remove the switchcap from the fixed portion using the normal operating handle switching-off procedures.



2. Cut a slit in the retainers of the insulation cap, with the aid of a knife and screwdriver. Lips (1), if any, can be slightly heated, for instance with a lighter. Insert the operating handle and remove the cap by wriggling it to and fro.



3. Remove the short-circuit indicator.

-
4. Fit the automatic re-setting short-circuit indicator.
-

5. Fit a new insulation cap by pushing it forcefully over the projections on the switchcap.
-



6. Replace the switchcap onto the fixed portion by using the operating handle and in adherence with the normal switching-on procedures.


Exchanging a short-circuit indicator

Type MF

1. Remove the switchcap from the fixed portion using the normal operating handle switching-off procedures.
-

2. Remove the insulation cap with the aid of the special tools. (Art. No. 3683 566: see illustration).
-

3. Remove the short-circuit indicator.

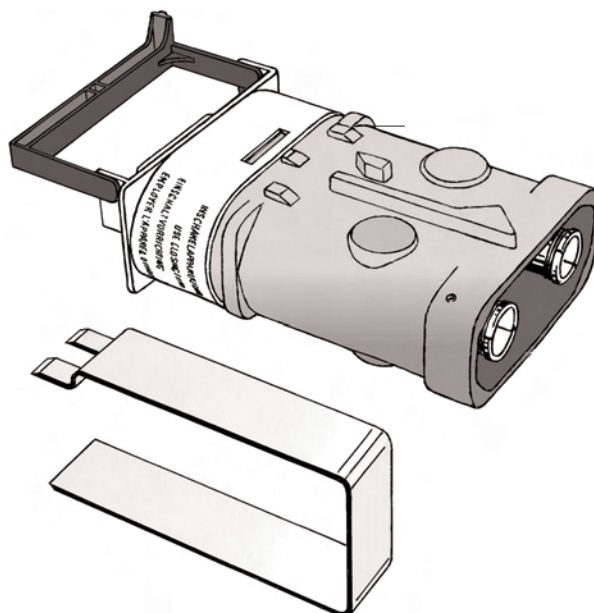

-
4. Fit the automatic re-setting short-circuit indicator.
-

5. Fit a new insulation cap by pushing it forcefully over the projections on the switchcap.
-

6. Replace the switchcap onto the fixed portion by using the operating handle and in adherence with the normal switching-on procedures.

